

# UNDERWATER APPLIED NON SLIP TREADS

# H<sub>2</sub>O Glue® NON SLIP TREADS POOL REPAIRS MADE SIMPLE.

## NON SLIP TREADS

Installs underwater using  
**H2O Glue® Aqua-Bonder  
Underwater Adhesive**

No need to drain pool. Use on vinyl pools, fiberglass concrete pools, gunite pools, vinyl pool steps, pools, fiberglass steps.



Use with H2O Glue  
**AQUA-BONDER**  
**KITS #1-#3**





Chem-Set™  
H2O Kit #3 Bulk  
Repair Kit



- 23.875 inches long (Can be cut to size)
- 2 inches wide
- .065 inch thick
- Fiberglass non slip treads
- Fine Grit coated fiberglass

## NON SLIP TREADS DIRECTIONS

- 1** Cut Non Slip Treads to desired length with hack saw. Lightly sand back before applying adhesive. Use a 32 teeth per inch blade.
- 2** Clean pool surface with scrub pad to remove algae or residue.
- 3** Apply H2O Glue Aqua-Bonder to back side of Non Slip Treads. Follow H2O Glue Aqua-Bonder directions.
- 4** Position Non Slip Treads in place. For best results, put weights such as bricks on Non Slip Treads for 10 minutes.
- 5** Remove weights:  
**Enjoy A Safer Pool!**

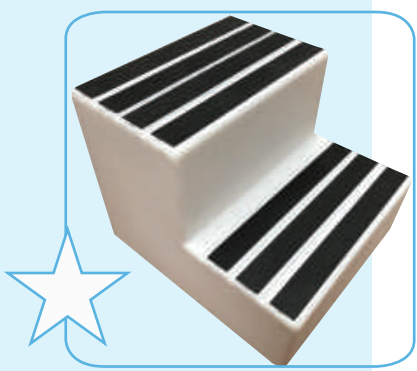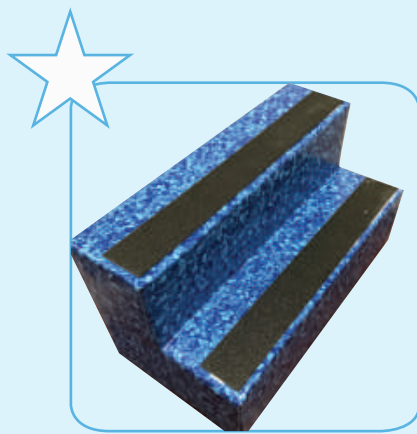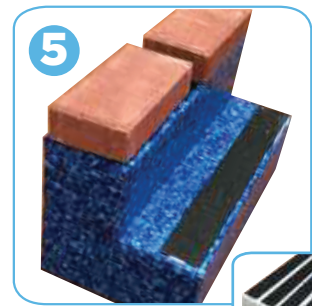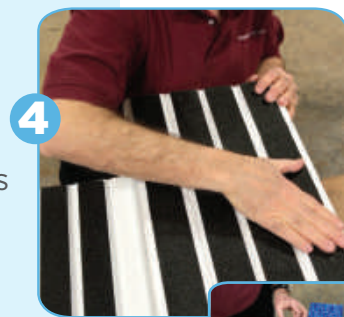

Available Colors • Blue • Yellow • Black • White

See Video <https://youtube/FbjqdDUwsfg>

Examples of H2O Non Slip Treads placement: Vinyl pool steps, ledges, bottom and under ladders in above ground pools.



800.220.1966 | [chemical-concepts.com](http://chemical-concepts.com)

410 Pike Road | Huntingdon Valley, PA 19006