


LC Bracket - Undermount Sink Installation Instructions




SAVE TIME AND MONEY!


Learn about all our products and watch installation videos at:
www.sinkits.com

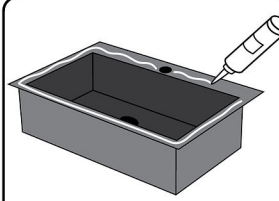


1 Apply a bead of silicone caulk to the top of sink rim.

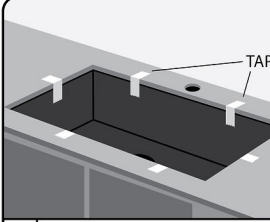


2 Place the sink into position and hold it in place using tape or a bar clamp. Clean off excess caulk.

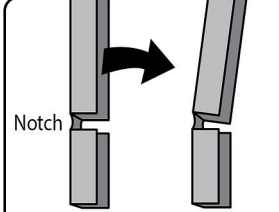


3 Bend the LC Bracket at the notches to allow for flat placement of the lower segment against the cabinet's side wall.

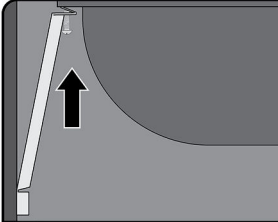


4 Position each LC Bracket into your desired location, making sure to apply upward pressure between the bracket and the sink.

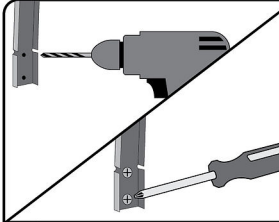

5 Pre-drill and install the provided mounting screws.

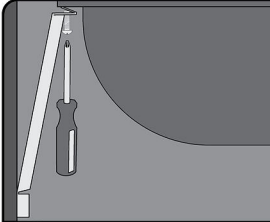

6 Adjust the locking screw to ensure the sink is snug with the countertop. Be careful not to lift the countertop.

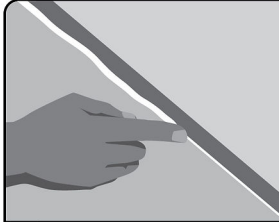

7 Smooth and clean excess caulk.

Disclaimer and limitation of liabilities: Sinkits LC Brackets are designed for the purpose of attaching undermount sinks to solid surfaces such as stone, quartz or products of similar characteristics. The end user must determine the number of brackets and placement required to properly complete the task and that the material the bracket screws are being inserted into has the characteristics needed to support the product being attached. Persons installing Sinkits must be familiar with the process of undermounting sinks beneath counter tops and that person assumes the responsibility of insuring the clamps are properly secured. All responsibility as to the appropriate use of this product is the responsibility of the user. This product is intended to be used by professional personnel who are competent to evaluate the limitations and proper placement and application of its intended use and that person should accept the responsibility that the product is adequately installed.